



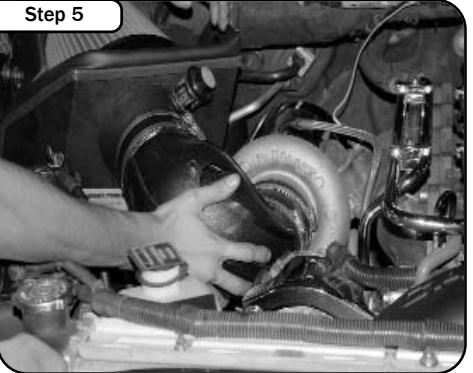

P.O. Box 1719
 Corona, CA 92878
 Support: 877-512-8111
 www.aFeFilters.com

Torque Booster Installation Instructions: 1994-2002 Dodge Ram Cummins 5.9L L6 CTD

Kit Part #	54-10079	Tools Required	Part List:
Make:	Dodge	5/16" nut driver	1 Intake tube rotomolded
Model:	Ram		1 Coupler 4-1/2" x 2-1/2"
Engine:	5.9L L6 TD		1 Coupler, high temp 4" x 2-1/2"
Year:	1994-2002		2 #072 hose clamps
			2 #064 hose clamp
Note: Please confirm Parts List and read all instructions steps before proceeding with actual installation.			

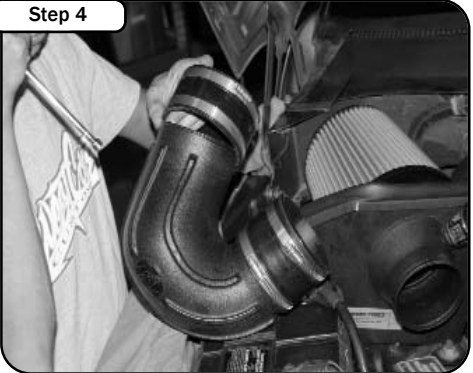


Complete kit with parts.

Complete 54-10071 stage 1 intake system.

Loosen the two hose clamps on the intake duct. Remove intake duct out of the engine bay.

Place the couplers and clamps on the intake tube. Do not tighten clamps at this time.

Position the assembly into the intake kit and tighten clamps.

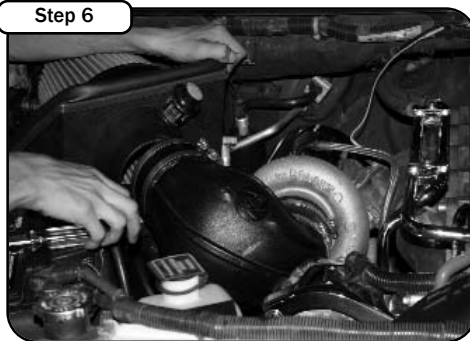


Tighten all the clamps snug but do not overtighten.

Your installation is now complete. Make sure all clamps are tight and that all electrical components are secure. Check and retighten connections after a few hours of operation.


DIESEL POWER BADGE

Your system includes one "Diesel Power" logo designed to compliment your truck.
Use the diagrams below for positioning of the logo for a clean factory look.

TYPICAL FORD RIGHT FENDER

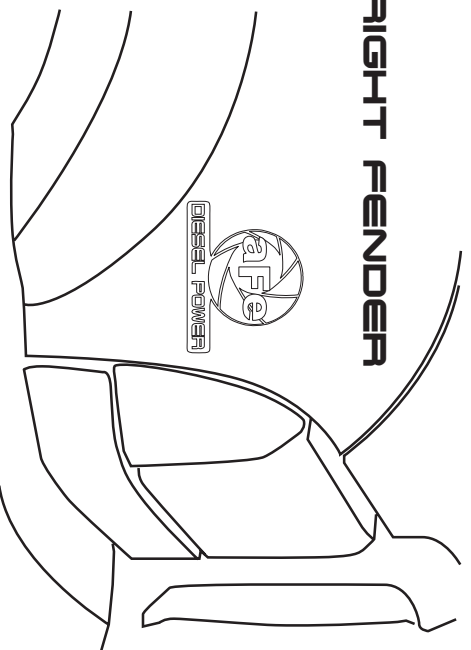

TYPICAL RAM RIGHT FENDER

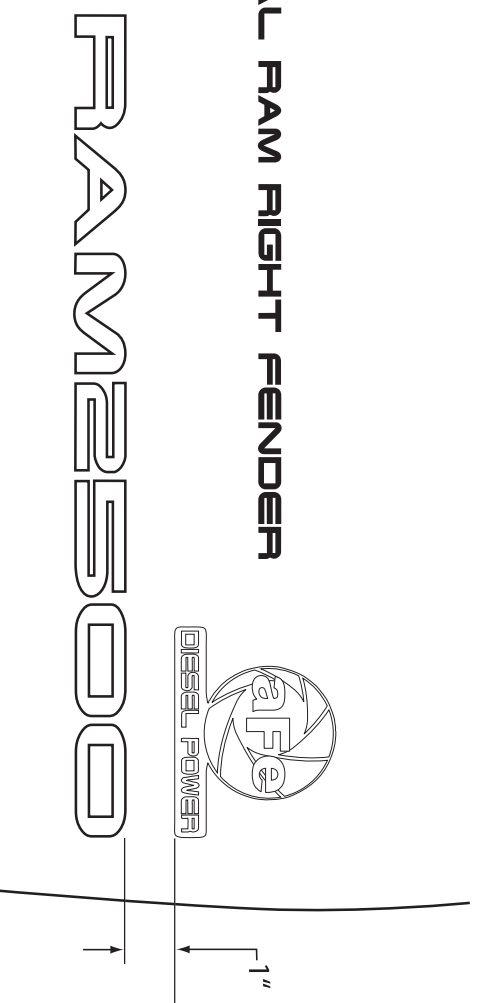

TYPICAL GM TRUCK LEFT FENDER

