



Part# SS100700-LRM
50" L.E.D. Roof Mount Bracket Kit

Vehicle Fitment:
2007-2013 Chevrolet Silverado
2007-2013 GMC Sierra
2007-2013 Avalanche, Suburban, Tahoe

*****READ ALL INSTRUCTIONS FROM START TO FINISH BEFORE INSTALLATION!*****



1. Remove door seals in the top front area of the door. Lay out template in base of rain gutter lining up "Front of Roof" and "Edge of Windsheild" marks as noted on the template.



2. Holding template to truck use center punch and mark the holes to be drilled. Drill marked holes with a 1/8" pilot drill bit and then use a 3/8" drill bit to finish.



3. Insert supplied Grip-Sert into holes. Use provided tool to fasten Grip-Sert by tightening down the bolt while placing a wrench on the center nut. Do not let Grip-Sert turn while tightening. (Small amount of silicone applied to splined area recommended.)



4. Tighten all Grip-Sert flush to body. Repeat steps 1 – 3 on passenger side of truck.



5. Install driver side bracket with the point facing forward.



6. Install the 1/4-20 x 3/4" Stainless Steel button head bolts. Snug bolts but do not fully tighten.



7. Bracket should look like this.



8. Install passenger side bracket onto LED light bar using light bar hardware.



9. Slide opposite side of light bar into the driver side bracket.




10. Fasten LED light to driver side LRM bracket.



11. Drop passenger side down and align with holes. Install bolts into passenger side bracket.



12. Adjust light bar to be level and torque down all bolts.

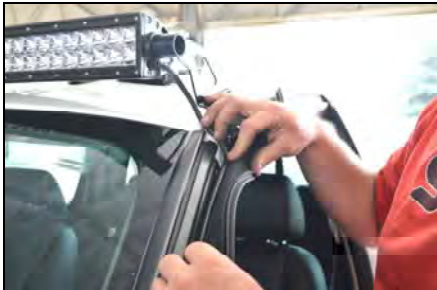

13. Route power wire down rain gutter between windshield and door seal and wire light bar as noted in light bar instructions.



14. Place rubber seal back onto drip rail. This will seal bracket and wiring from the elements.



15. FINISHED!!!

RETORQUE ALL NUTS AND BOLTS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

SHARE WITH US



@socalsupertrucks
#socalsupertrucks

Warranty Information

SoCal SuperTrucks WARRANTY POLICY

SoCal SuperTrucks warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. SoCal SuperTrucks does not warrant the product for finish, alterations, modifications and/or installation contrary to SoCal SuperTrucks instructions. SoCal SuperTrucks products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada. SoCal SuperTrucks obligation under this warranty is limited to the repair or replacement, at SoCal SuperTrucks' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty.

We do not warranty any other product not directly manufactured by SoCal SuperTrucks.

Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.

SoCal SuperTrucks, Inc. 774 S E Street, San Bernardino, CA 92408-1907 (909)383-5454



Part# SS109900-LRM
50" L.E.D. Roof Mount Bracket Kit

Vehicle Fitment:
1999-2006 Chevrolet Silverado
1999-2006 GMC Sierra
DOES NOT FIT SUV's

*****READ ALL INSTRUCTIONS FROM START TO FINISH BEFORE INSTALLATION!*****



1. Remove door seals in the top front area of the door. Lay out template in base of rain gutter lining up "Front of Roof" and "Front of Roof Drip Rail" marks as noted on the template.



2. Holding template to truck use center punch and mark the holes to be drilled. Drill marked holes with a 1/8" pilot drill bit and then use a 3/8" drill bit to finish.




3. Insert supplied Grip-Sert into holes. Use provided tool to fasten Grip-Sert by tightening down the bolt while placing a wrench on the center nut. Do not let Grip-Sert turn while tightening. (Small amount of silicone applied to splined area recommended.)



4. Tighten all Grip-Sert flush to body. Repeat steps 1 – 3 on passenger side of truck.



5. Install driver side bracket with the point facing forward.

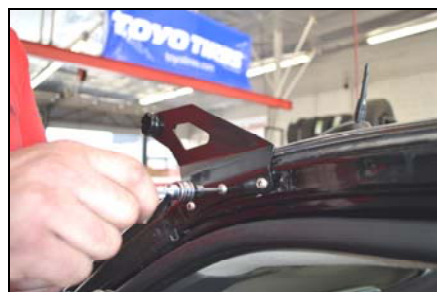

6. Install the 1/4-20 x 1" Stainless Steel button head bolts. Snug bolts but do not fully tighten.



7. Bracket should look like this.



8. Install passenger side bracket onto LED light bar using light bar hardware.



9. Slide opposite side of light bar into the driver side bracket.



10. Fasten LED light to driver side LRM bracket.



11. Drop passenger side down and align with holes. Install bolts into passenger side bracket.



12. Adjust light bar to be level and torque down all bolts.



13. Route power wire down rain gutter between windshield and door seal and wire light bar as noted in light bar instructions.



14. Place rubber seal back onto drip rail. This will seal bracket and wiring from the elements.



15. FINISHED!!!

RETORQUE ALL NUTS AND BOLTS AFTER 100 MILES AND PERIODICALLY THEREAFTER.

SHARE WITH US



@socialsupertrucks
#socialsupertrucks

Warranty Information

SoCal SuperTrucks WARRANTY POLICY

SoCal SuperTrucks warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. SoCal SuperTrucks does not warrant the product for finish, alterations, modifications and/or installation contrary to SoCal SuperTrucks instructions. SoCal SuperTrucks products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada. SoCal SuperTrucks obligation under this warranty is limited to the repair or replacement, at SoCal SuperTrucks' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty.

We do not warrant any other product not directly manufactured by SoCal SuperTrucks.

Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.

SoCal SuperTrucks, Inc. 774 S E Street, San Bernardino, CA 92408-1907 (909)383-5454