





P.O. Box 1719
 Corona, CA 92878
 Support: 877-512-8111
 www.aFeFilters.com

Intake Kit Installation Instructions: Dodge Ram 2500-3500 Cummins (td)


Kit Part #	Tools Required	Part List:	Air filter replacement:
54-10072 / 51-10072 Pro Dry S™	5/16 or 8mm nut driver	1 Filter housing	1 Filter P/N 24-91026
75-10072 Pro-GUARD 7™	socket or wrench	1 Housing cover	1 Filter P/N 72-90021 (optional Pro-GUARD™ 7 kit)
Make: Dodge	5/32 Hex Key	4 Button head screws 1/4-20" x 1/2"	1 Filter P/N 21-90021 (optional Pro-Dry S™ kit)
Model: Ram 2500 & 3500	Optional: 11/16 spade drill	1 Intake tube	
Engine: L6-5.9L (td)		1 6" Hump coupler	
Year: 1994 - 2002		2 Clamps #104	
		1 4" Straight coupler	
		2 Clamps #064	

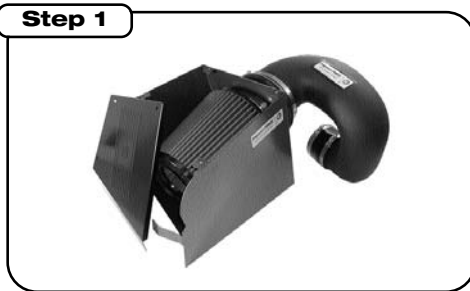

Complete kit with parts.

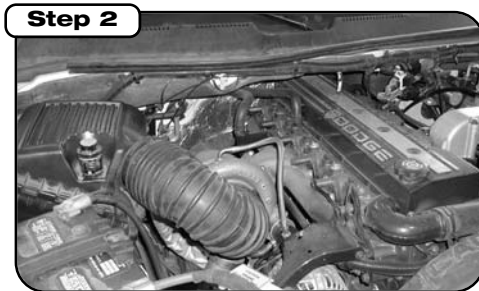


Complete stock intake.

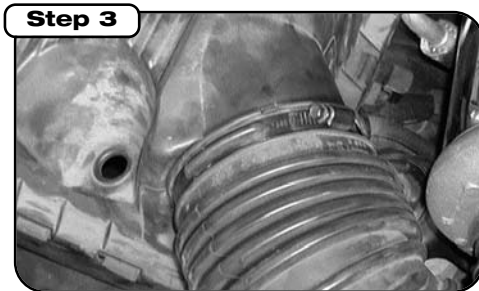

Loosen clamp at turbo inlet and remove top half of filter box and filter element.



Remove lower half of filter box, unscrew 3 inserts and transfer inserts to new filter housing.

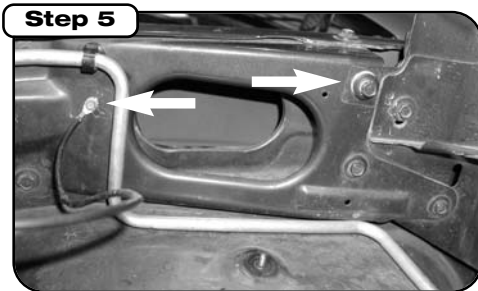


Remove inner fender brace screw and ground wire screw. Trim wire connector tab on battery tray for clearance if needed.




Lower housing into place, tab for ground screw tucks behind A/C line first, then lower to clear turbo housing. Housing should clear A/C line, line up rubber mounts and secure by pushing down hard or screwing mounts in. Install fender brace screw and ground screw and wire.



Slip boots over intake tube and install on turbo and filter housing. It may be easier to install clamps after tube is in position. If filter restriction gauge is desired, drill an 11/16 hole with a woodworking spade bit and transfer grommet and sensor to new intake tube. Sensor should be placed near larger end of tube for accurate results.

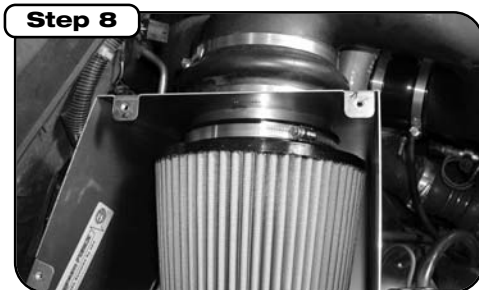

Install factory pre-oiled filter into housing. Install cover and make a final check for loose clamps, pinched wires etc. before starting engine.

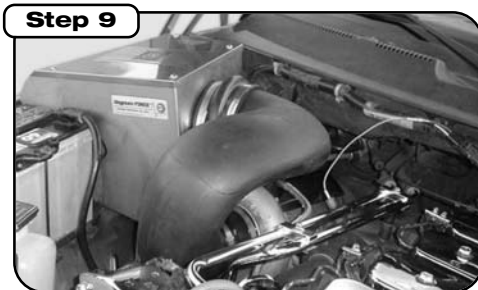


Make sure all clamps are tight and that all electrical components are secure. Check and retighten connections and filter after a few hours of operation.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil or aFe P/N: 90-50000 gold oil aerosol, or aFe P/N: 90-50500 gold squeeze bottle oil).
 Filter Replacement: Magnum FLOW PN: 24-91026 (black w/blue media) or ProGUARD 7™ PN: 72-90021 or Pro Dry S™ P/N 21-90021 (black w/white media) Pro Dry S™ cleaning: see cleaning instruction sheet 06-00074

DIESEL POWER BADGE

Your system includes one "Diesel Power" logo designed to compliment your truck.
Use the diagrams below for positioning of the logo for a clean factory look.

TYPICAL FORD RIGHT FENDER

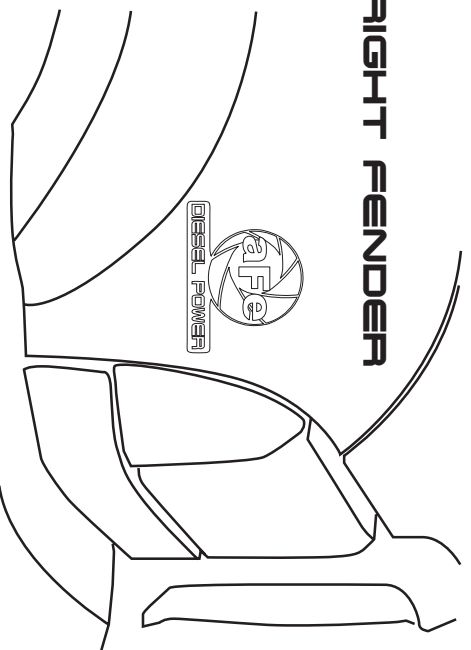

TYPICAL RAM RIGHT FENDER



TYPICAL GM TRUCK LEFT FENDER

